

# How to install the Zipper


## Step 1

Select the appropriate place for an entry/exit point to your barrier and line up the zipper.



## Step 3

Open up the zipper and cut an opening using the double bladed Zipper Cutter.

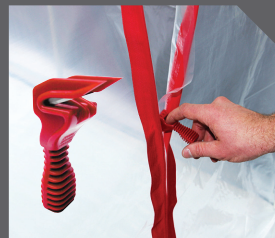

## Step 2

Peel off the adhesive backing and stick the zipper to the plastic finishing at floor level.



## Step 4

Your zipper is good to go and you now have a completely dust sealed entry point.



Email: [info@zipwall.com.au](mailto:info@zipwall.com.au)  
Or visit: [zipwall.com.au](http://zipwall.com.au)

**ZIPWALL**<sup>®</sup>  
The **zero dust** solution